


## Set-up

step 2

step 1


## Volume

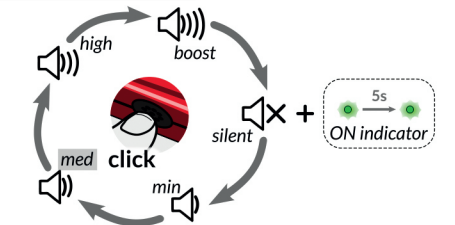

Vario is silent on ground,  
changing volume will enable vario


default parameter

## Vario settings

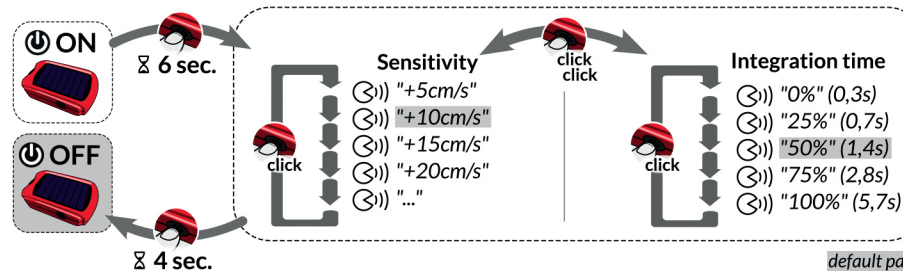


default parameter

## Installation

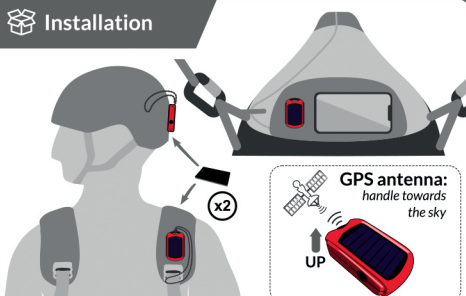


Shoulder strap or cockpit installation recommended

## Weak lift buzzer (during flight)

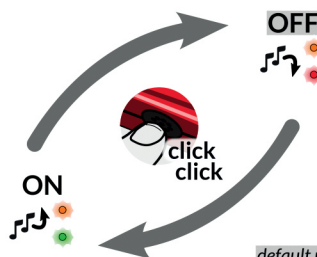

default parameter


## Sink alarm settings

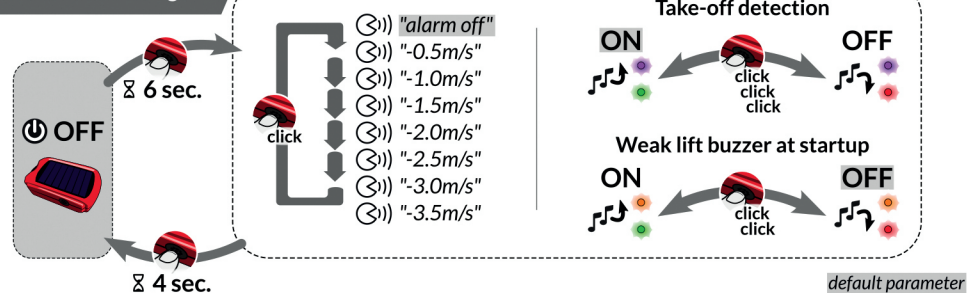

default parameter

## ON / OFF

### Searching GPS\*

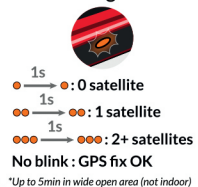


ON : 3 x 3 sec.  
OFF : 3 x 3 sec.

Battery level:

- 3 x
- 2 x
- 1 x




## Voice: Manual mode

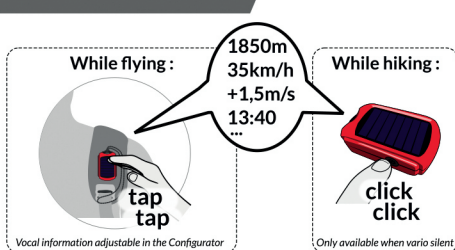

Default announcements are: altitude, speed, climb rate

## Voice: Auto mode (during flight)

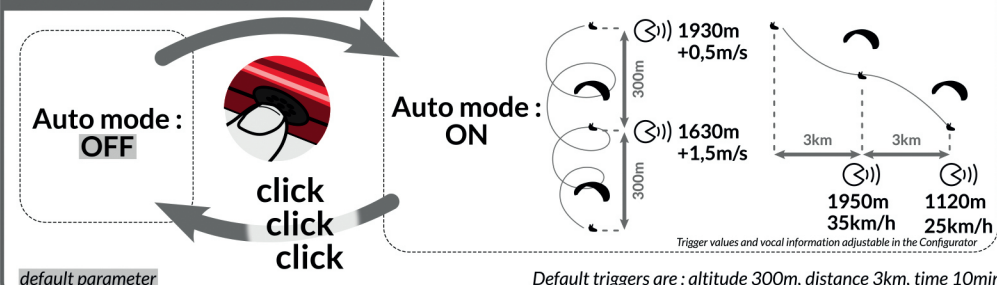

default parameter

Default triggers are: altitude 300m, distance 3km, time 10min