


 Montage

étape 2

étape 1

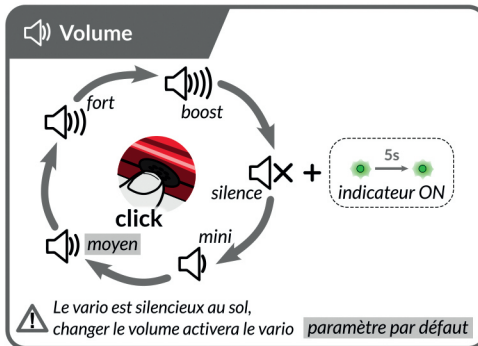

**Régler la sensibilité**

ON 6 sec.

click

**Sensibilité**

- (3)) "+5cm/s"
- (3)) "+10cm/s"
- (3)) "+15cm/s"
- (3)) "+20cm/s"
- (3)) "..."

click

**Temps d'intégration**

- (3)) "0%" (0,3s)
- (3)) "25%" (0,7s)
- (3)) "50%" (1,4s)
- (3)) "75%" (2,8s)
- (3)) "100%" (5,7s)

click

OFF 4 sec.

*paramètre par défaut*

**Zérotagage (en vol)**

**OFF**

**ON**

click  
click

paramètre par défaut

[illegible]

**ON / OFF**



**ON :** 3 sec. 🎵

**OFF :** 3 sec. 🎵

**Acquisition GPS\* :**



1s → ● : 0 satellite

1s → ●● : 1 satellite

1s → ●●● : 2+ satellites

LED éteinte : fix GPS OK

*(Jusqu'à 5min en zone dégagée (pas d'intérieur))*

**Niveau de batterie :**

3 x 🎵 🔴 🔋

2 x 🎵 🟡 🔋

1 x 🎵 🔴 🔋

**Batterie faible :** 🔋



3s → 🔴 🔴

The diagram is divided into two main sections by a dashed line. The top section, labeled 'En vol :', shows a hand tapping a red button on a device, with a speech bubble indicating that voice announcements are active during flight. The bottom section, labeled 'À pieds :', shows the same device with a 'click click' sound effect, indicating that voice announcements are also active when the device is on the ground. A note at the bottom states that voice announcements are available only when the device is in silent mode.

**En vol :**

1850m  
35km/h  
+1,5m/s  
13:40  
\*\*\*

**À pieds :**

click  
click

Informations vocales réglables dans le Configurator

Disponible uniquement lorsque le vario est silencieux

Les annonces par défaut sont : altitude, vitesse, taux de montée

**Mode auto : OFF**

**click  
click  
click**

**Mode auto : ON**

Seuils de déclenchement et informations vocales réglables dans le Configurator

paramètre par défaut

Les seuils de déclenchement par défaut sont : altitude 300m, distance 3km, temps 10min